 
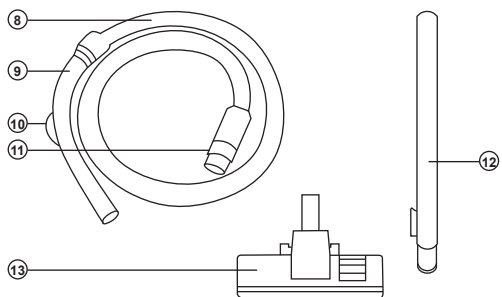 



English

Parts Identifications

1. Handle
2. Dust Container Release Button
3. Dust Container
4. ON/OFF Power Button/Speed Control
5. Cord Rewinder Button
6. Power Cord
7. Wheel
8. Flexible Hose
9. Flexible Hose Handle
10. Air Flow Regulator
11. Hose Connector
12. Telescopic Tube
13. Floor Brush

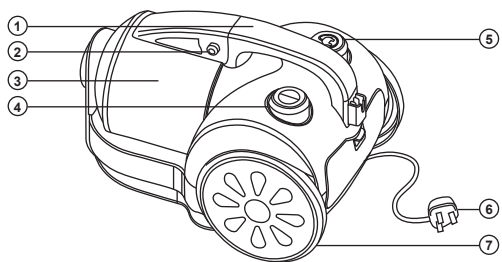


 Dust Container & HEPA Filter

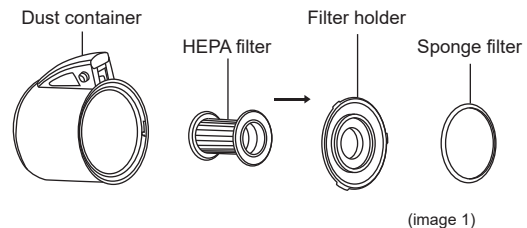

(image 1)

 
Remove dust container

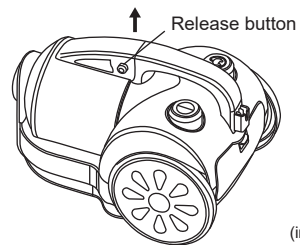

(image 2)

Install dust container

 Press down the dust container into the main unit.

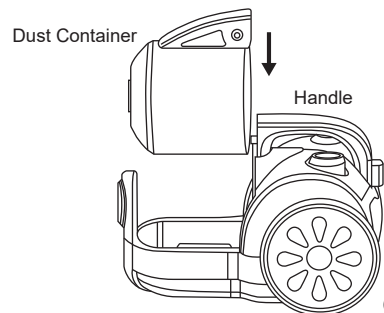

(image 3)

How to Use

1. Connect the flexible hose handle to the floor brush together with the telescopic tube.
2. Insert the flexible hose connector to the vacuum cleaner body.
3. Pull out the power cord to its full length and plug it into the power supply.
4. Switch ON the power supply and press the ON/OFF power button to start operating the vacuum cleaner. Turn the speed control to the desired level.
5. Before rewinding the power cord, unplug from the power supply and press the cord rewriter button. Always hold the plug before pressing cord rewriter button as the power cord will retract very quickly.

Cleaning and Maintenance

1. Empty the dust container regularly to obtain consistent operating result.
2. Disassemble the flexible hose connector from vacuum cleaner body. Then, disengage the dust container assembly by pressing on the dust container release button and lift the dust container away from vacuum cleaner body. (image 2)
3. To empty the dust container, remove the filter holder from the dust container assembly by turning anti-clockwise to pull out.
4. Remove the HEPA filter from the filter holder by turning the HEPA filter and pull out.
5. Use a small brush to remove dirt from the pleats.
6. Wash the filter with water if necessary and let it air dry completely before reassembly.
7. Reattach the HEPA filter to the filter holder by slightly press in.
8. Reattach HEPA filter and filter holder assembly to the dust container, hold the filter holder and turn clockwise to lock it.
9. Place the dust container onto the body, press until a "click" sound is heard. (image 3)

Troubleshooting

Problem	Possible Cause	Solution
The suction power is insufficient.	The dust container is full.	Empty the dust container.
	The filter is dirty.	Clean or replace the filter.
	The nozzle, tube or hose is blocked up.	To remove the obstruction, disconnect the blocked up item and connect it the other way around. Switch ON the vacuum cleaner to force the air through the blocked-up item in opposite direction.
	The suction power is set to a low setting.	Increase the suction power with the airflow regulator on the handle.
The appliance is not working.	The plug is not connected to the wall socket.	Insert the plug into the power socket.

Specifications

Model	CVC-1408-HC
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	1600W

E-WARRANTY

Online Warranty Registration
<http://www.hetch2u.com/e-warranty>

For full version usage and safety instruction manual,
please visit www.hetch2u.com



HETCH
www.hetch2u.com

Powered by :
IN & EX HOLDINGS SDN. BHD. (496703-U)
No. 48-3, Jalan PJU 5/10,
Dataran Sunway, Kota Damansara,
47810 Petaling Jaya,
Selangor D. E. , Malaysia.

Tel : (603) 6141 6800
E-mail: info@hetch2u.com

 
 
Facebook : hetch




Bahasa Malaysia

Pengenalan Bahagian

1. Pemegang
2. Butang Pelepas Bekas Habuk
3. Bekas Habuk
4. Butang Kuasa ON/OFF (MENGHIDUPKAN/MEMATIKAN) / Kawalan Kelajuan
5. Butang Penggulung Semula Kord
6. Kord Kuasa
7. Roda
8. Hos Boleh Lentur
9. Pemegang Hos Boleh Lentur
10. Alat Kawal Atur Aliran Udara
11. Hos Penyambung
12. Tiub Teleskop
13. Berus Lantai

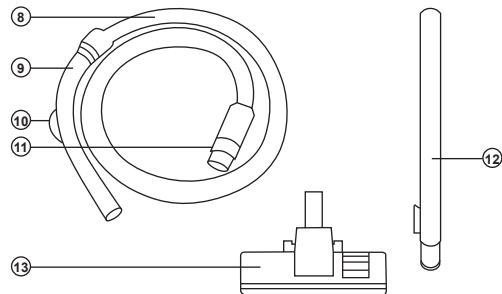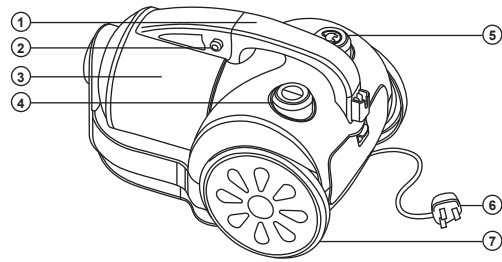


Bekas Habuk & Penapis HEPA

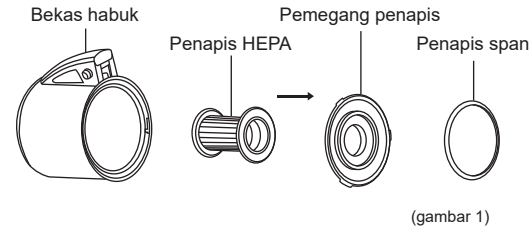 

(gambar 1)

 
Tanggalkan bekas habuk

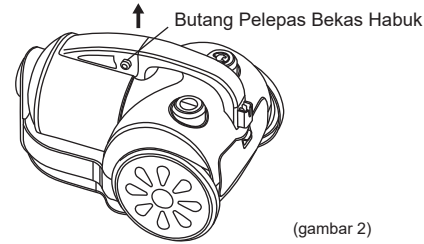

(gambar 2)

Pasangkan bekas habuk

 Tekan ke bawah bekas habuk ke dalam unit utama.

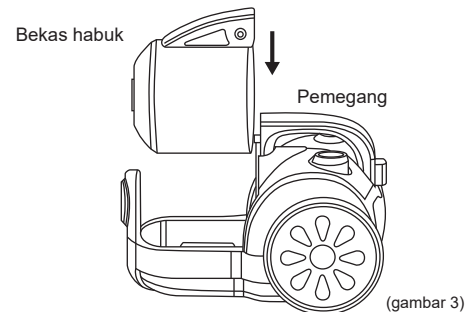

(gambar 3)

Cara Penggunaan

1. Sambungkan pemegang hos boleh lentur ke berus lantai bersama dengan tiub teleskop.
2. Masukkan penyambung hos boleh lentur ke badan pembersih vakum.
3. Tarik keluar kord kuasa sepenuhnya dan masukkan palam ke bekalan kuasa.
4. Hidupkan suis (ON) bekalan kuasa dan tekan butang kuasa ON/OFF (MENGHIDUPKAN/MEMATIKAN) untuk memulakan operasi pembersih vakum. Pusingkan kawalan kelajuan ke tahap yang diinginkan.
5. Sebelum menggulung semula kord kuasa, cabut palam daripada bekalan kuasa dan tekan butang penggulung semula kord. Sentiasa pegang palam sebelum menekan butang penggulung semula kord kerana kord kuasa akan menyentak dengan cepat.

Pembersihan dan Penyelenggaraan

1. Bersihkan bekas habuk dengan kerap untuk mendapatkan hasil operasi yang konsisten.
2. Pisahkan bahagian penyambung hos boleh lentur daripada badan pembersih vakum. Kemudian, lepaskan pemasangan bekas habuk dengan menekan butang pelepas bekas habuk dan angkat bekas habuk daripada badan pembersih vakum. (gambar 2)
3. Untuk mengosongkan bekas habuk, tanggalkan pemegang penapis daripada pemasangan bekas habuk dengan memusing lawan arah jam untuk menarik keluar.
4. Tanggalkan penapis HEPA daripada pemegang penapis dengan memusing penapis HEPA dan tarik keluar.
5. Guna berus kecil untuk menanggalkan kotoran daripada lipatan-lipatan.
6. Basuh penapis dengan air jika perlu dan biarkannya kering sebelum memasang semula.
7. Pasangkan semula penapis HEPA ke pemegang penapis dengan menekannya sedikit ke dalam.
8. Pasangkan semula penapis HEPA dan pemegang penapis ke bekas habuk, pegang pemegang habuk dan pusing arah jam untuk menguncinya.
9. Letakkan bekas habuk ke dalam unit utama, tekan sehingga terdengar bunyi 'klik'. (gambar 3)

Penyelesaian Masalah

Masalah	Kemungkinan Penyebab	Penyelesaian
Kurang kuasa sedutan.	Bekas habuk penuh.	Kosongkan bekas habuk.
	Penapis kotor.	Bersihkan atau gantikan penapis.
	Nozel, tiub atau hos tersumbat.	Jika halangan tersumbat, bersihkan halangan tersebut dan sambungkan semula ke arah yang berlainan. Hidupkan (ON) suis pembersih vakum untuk memaksa udara melalui benda yang tersumbat dari arah yang bertentangan.
	Kuasa sedutan ditetapkan pada tetapan rendah.	Tinggikan kuasa sedutan dengan alat kawal atur aliran udara pada pemegang.
Perkakas tidak berfungsi.	Palam tidak disambungkan ke soket dinding.	Masukkan palam ke soket kuasa.

Spesikasi

Model	CVC-1408-HC
Voltan Terkadar	220-240V~
Frekuensi Terkadar	50-60Hz
Kuasa Terkadar	1600W